

MICROH

PROFESSIONAL PRODUCTS

www.microhpro.com



USER MANUAL

RIO ZOOM 19 QUAD

Please read this user manual before using this product

Introduction

Thank you for purchasing **RIO ZOOM 19 QUAD**. Every unit has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton appears to be damaged, carefully inspect your fixture for any damage and be sure all accessories necessary to operate the unit has arrived intact. In the case damage has been found or parts are missing, please contact the manufacturer or your dealer for further instructions. Do not return this unit to your dealer without first contacting.

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE POWERING OR INSTALLING RIO ZOOM 19 QUAD SAVE IT FOR FUTURE REFERENCE

Warning!

To prevent or reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture

Caution! There are no user serviceable parts inside this unit. Do not attempt any repairs yourself; doing so will void your manufactures warranty. In the unlikely event your unit may require service please contact the manufacturer or your dealer.

| Item | Quantity |
|----------------------|----------|
| Rio Zoom 19 Quad | 1 |
| Power cord | 1 |
| Powercon out adapter | 1 |
| User manual | 1 |

Safety Precautions

1. To reduce the risk of electrical shock or fire, do not expose this unit to rain or moisture.
2. Do not spill water or other liquids into or on to your unit.
3. Be sure that the local power outlet matches that of the required voltage for your unit.
4. Do not attempt to operate this unit if the power cord has been frayed or broken. Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
5. Disconnect from main power before making any type of connection.
6. Do not remove the cover under any conditions. There are no user serviceable parts inside.
7. Never operate this unit when it's cover is removed.
8. Never plug this unit in to a dimmer pack.
9. Always be sure to mount this unit in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
10. Do not attempt to operate this unit, if it becomes damaged.
11. This unit is intended for indoor use only; use of this product outdoors voids all warranties.
12. During long periods of non-use, disconnect the unit's main power.
13. Always mount this unit in safe and stable matter.
14. Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the point they exit from the unit.
15. Cleaning -The fixture should be cleaned only as recommended by the manufacturer. See "Cleaning" for details.
16. Heat -The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
17. The fixture should be serviced by qualified service personnel when:
 - The power-supply cord or the plug has been damaged.
 - Objects have fallen, or liquid has been spilled into the appliance.
 - The appliance has been exposed to rain or water.
 - The appliance does not appear to operate normally or exhibits a marked change in performance.

Set Up


Power Supply:

Before plugging your unit in, be sure the source voltage in your area matches the required voltage for your RIO ZOOM 19 QUAD.

The model is has an Auto switching power supply which allows the unit to operate at 90-250V/50~60Hz.

Connection To The Mains

For protection from electric shock, the fixture must be earthed! Install a suitable plug on the power cord; note that the cores in the power cord are colored according to the following table. The earth has to be connected! If you have any doubts about proper installation, consult a qualified electrician.

| Core (EU) | Core (US) | Connection | Plug Terminal Marketing |
|-------------------------------------|-------------------------|--------------------------|--|
| Brown Light Blue Yellow/Green | Black White Green | Live Neutral Earth |  N |

DMX512 connection

The fixture is equipped with 3-pin or 5-pin XLR sockets for DMX input and output. The sockets are wired in parallel. Only use a shielded twisted-pair cable designed for RS-485 and 3-pin or 5-pin XLR-plugs and connectors in order to connect the controller with the fixture or one fixture with another

DMX-output

XLR mounting-sockets (rear view):



- 1-Shield
- 2-Signal (-)
- 3-Signal (+)
- 4-Not connected
- 5-Not connected



DMX-input



- 1-Shield
- 2-Signal (-)
- 3-Signal (+)
- 4-Not connected
- 5-Not connected



DMX Linking:

To ensure proper DMX data transmission, when using several DMX fixtures try to use the shortest cable path possible. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example; a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line, at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.

Operating Modes:

You can use the RIO ZOOM 19 QUAD in 4 ways:

1. Auto Mode - The unit will automatically chase through the different colors and built-in programs.
2. Slave Mode – The unit will run under slave mode.
3. DMX control mode - This function will allow you to control each individual fixtures traits with a standard DMX 512 controller.
4. Sound Mode- This function allows you to control fixture via sound

DMX Mode:

Operating through a DMX controller give the user the freedom to create their own programs tailored to their own individual needs. This function also allows you to use your fixtures as spot lights.

1. This function will allow you to control each individual fixture's traits with a standard DMX 512 controller.
2. The RIO ZOOM 19 QUAD uses 5/7/8 DMX channels (RGBW version) to operate. Please see "DMX Values and Functions" for the DMX traits.
3. To run your fixture in DMX mode, plug in the fixture via the XLR connections to any standard DMX controller. Set your desired DMX address following the setup specifications that come with your DMX controller.
4. Main Control Menu: The control board on the fixture base is your interface to access and control all functions on the unit, Its digital display gives you a code vide of functions

CONTROL BOARD



MENU UP DOWN ENTER

5CHs Mode

7CHs Mode

8CHs Mode

Auto Run

Sound Control

Manual
Control/OFF

Manual
Control/ON



Strobe



Red



Green



Blue



White



Zoom



DMX Chart

[d.001] Mode (5 DMX Channels)

| Channel | Value | Function |
|---------|-------|----------------------|
| 1 | 0-255 | Zoom function 5°-60° |
| 2 | 0-255 | Red intensity |
| 3 | 0-255 | Green intensity |
| 4 | 0-255 | Blue intensity |
| 5 | 0-255 | White intensity |

[A.001] Mode (7 DMX Channels)

| Channel | Value | Function |
|---------|---------|------------------------------|
| 1 | 0-255 | Zoom function 5°-60° |
| 2 | 0-255 | Dimmer |
| 3 | 0-3 | No function |
| | 4-127 | Strobe (slow to fast) |
| | 128-131 | No function |
| | 132-255 | Random Strobe (slow to fast) |
| 4 | 0-255 | Red intensity |
| 5 | 0-255 | Green intensity |
| 6 | 0-255 | Blue intensity |
| 7 | 0-255 | White intensity |

[P.001] Mode (8 DMX Channels)

| Channel | Value | Function |
|---------|---------|------------------------------|
| 1 | 0-255 | Zoom function 5°-60° |
| 2 | 0-255 | Dimmer |
| 3 | 0-3 | No function |
| | 4-127 | Strobe (slow to fast) |
| | 128-131 | No function |
| | 132-255 | Random strobe (slow to fast) |

[P.001] Mode (8 DMX Channels) continued.

| Channel | Value | Function |
|----------------|----------------------------------|-------------------------|
| 4 | 0-7 | No function |
| | 8-15 | Red |
| | 16-23 | Green |
| | 24-31 | Blue |
| | 32-39 | White |
| | 40-47 | Red+Green |
| | 48-55 | Green+Blue |
| | 56-63 | Red+Blue |
| | 64-71 | Red+White |
| | 72-79 | Green+White |
| | 80-87 | Blue+White |
| | 88-94 | Red+Green+Blue |
| | 96-103 | Red+Green+White |
| | -104-111 | Red+Blue+White |
| | 112-119 | Green+Blue+White |
| | 120-127 | Red+Green+Blue+White |
| | 128-135 | Off |
| | 136-143 | Red fade In/Out |
| | 144-151 | Green fade In/Out |
| | 152-159 | Blue fade In/Out |
| | 160-167 | White fade In/Out |
| | 168-175 | Red+Green fade In/Out |
| | 176-183 | Red+Blue fade In/Out |
| | 184-191 | Green+Blue fade In/Out |
| | 192-199 | Red+White fade In/Out |
| | 200-207 | Green+White fade In/Out |
| 208-215 | Blue+White fade In/Out | |
| 216-223 | Red+Blue+White fade In/Out | |
| 224-231 | Red+Green+Blue fade In/Out | |
| 232-239 | Red+Green+White fade In/Out | |
| 240-249 | Green+Blue+White fade In/Out | |
| 250-255 | Red+Green+Blue+White fade In/Out | |
| 5 | 0-255 | Red intensity |
| 6 | 0-255 | Green intensity |
| 7 | 0-255 | Blue intensity |
| 8 | 0-255 | White intensity |

Cleaning

Due to fog residue, smoke, and dust cleaning the internal and external optical lenses must be carried out periodically to optimize light output.

1. Use normal glass cleaner and a soft cloth to wipe down the outside casing.
2. Clean the external optics with glass cleaner and a soft cloth every 20 days.
3. Always be sure to dry all parts completely before plugging the unit back in.

Cleaning frequency depends on the environment in which the fixture operates (i.e. smoke, fog residue, dust, dew).

Specifications

| | |
|--------------------------|------------------------------|
| Model: | RIO ZOOM 19 QUAD |
| Working Position: | Any safe working position |
| Voltage: | 90-250V / 50~60Hz |
| Power: | 300W |
| LED Lamp : | OSRAM 4 in 1(RGBW) 15W*19pcs |
| DMX Channel: | 5/7/8 channel mode |
| Zoom angle: | 5°-60° |
| Waterproof rate: | IP20 |
| Gross Weight: | 7 Kgs |
| Warranty: | 2 Year |

PLEASE NOTE:

All information for this product is subject to change without notice!

MICROH
PROFESSIONAL PRODUCTS

For more information please contact:

www.microhpro.com
info@microhpro.com
905.428.9062